



- NOTES:**
1. READ OPERATORS MANUAL PRIOR TO INSTALLATION AND OPERATION OF MACHINE
 2. IF MACHINE IS TO BE USED IN ENCLOSED AREAS, A FLUE MUST BE INSTALLED TO VENT BURNER GAS TO OUTSIDE ATMOSPHERE. A DRAFT DIVERTER MUST BE INSTALLED TO PERMIT PROPER UPWARD FLOW OF EXHAUST FLUE GASES.
 3. ALL VENTING MUST BE IN ACCORDANCE WITH APPLICABLE FEDERAL AND STATE LAWS, AND LOCAL ORDINANCES. CONSULT LOCAL HEATING CONTRACTORS.
 4. MAX BTU OUTPUT: 720,450 BTU/HR (5700) & 939,890 BTU/HR (5800)
 5. WATER SUPPLY MUST BE CAPABLE OF PROVIDING A MIN. OF 7.8 GPM (5700) & 9.5 GPM (5800)
 6. ELECTRICAL REQUIREMENT VARY DEPENDING ON ACTUAL MODEL ORDERED, VERIFY REQUIREMENTS WITH SELLING/SERVICING HOTSY DISTRIBUTOR

REVISIONS			
REV	DESCRIPTION	DATE	BY

LEGEND
 △ NOTE ○ ITEM
 ○ REVISION
 UNLESS OTHERWISE SPECIFIED:
 DIMENSIONS ARE IN INCHES
 TOLERANCES

LINEAR
 FRACTION ± 1/4"
 .XX ± .13
 .XXX ± .030
 .XXX ± .060 (TUBING)
 ANGULAR
 ± 1.0'

CAMAS DESIGN FACILITY
 4275 N.W. Pacific Rim Blvd.
 Camas, Washington 98607
 Ph. (360) 833-1600
 Fax. (360) 833-9200

DRAWING DESCRIPTION		
HOTSY 5700/5800 GAS FIRED		
DRAWN	DATE	MACHINE
CHECKED		
DESIGN		SCALE
JG	8/6/2008	
DRAWING NUMBER		REV
ACAD\HOTSY\SHOP DRAWINGS		